

# Toyota H Immobilizer All Keys Lost solution (all markets)

## I. Getting Started

### Introduction

This Help relates to Tango software version [1.114](#) (April 2019) and up.

The function allows to solve all keys lost (AKL) situation on Toyota vehicles equipped with [128bit H immobilization system \(Page1 39,59,3A,5A\) regardless of market \(EU/Asia/USA\)](#), by creating a master key on [LKP-04](#), utilizing [SLK-06](#), which further serves for diagnostic authorization for key addition, without need to replace or reset the immobilizer. During the process car data is not altered in any way.

#### System requirements:

- [Tango programmer](#)
- [SLK-06 Sniffer](#)
- [LKP-04 transponder](#)
- [Toyota maker](#)
- [SLK-06 maker](#)
- [Toyota Image Generator H](#)
- Internet connection
- Any metal key that fits and can turn on ignition switch of the vehicle

### SLK -06

SLK-06 is battery powered. **Note that a battery is not included with an emulator and has to be obtained locally.** Three standard types of battery are compatible for our emulators:  
**CR1616, CR1620, CR1632.**

If battery is removed all data from the emulator will be lost. When power is restored the default data will be loaded into the transponder memory.

**Thus the transponder can be cleaned to default state just by taking off the battery.**

We did no test how long the battery lifetime in this application is, because of the main purpose of the SLK-6 is to get data in few minutes. The battery shouldn't drop much below 3V or emulator won't save data.



#### Autodetect:



SLK-06 not programmed.

Default state after the battery replacement.

## II. Operation Procedure

Due to the nature of Toyota H immobilization system a creative approach is needed in order to solve all keys lost situation, particularly for EU/Asia regions vehicles. The solution currently implemented in Tango can be summarized in three main steps, which are described below:

[Obtaining data \(Sniffing\)](#)

[Calculation \(Calculate Data\)](#)

[Master Key Creation \(Write Transponder\)](#)

### Obtaining data (Sniffing)

1. Disconnect battery from car (1-3min)
2. Reconnect car battery
3. Insert battery in SLK-06 (LED will blink few times, then go off)
4. Hold SLK-06 next to the ignition lock (as if it is a key)
5. Insert blank key blade (without any transponder) into the ignition and switch **ON**
6. If steps from 1 to 5 are performed correctly the LED of SLK-06 will start blinking. Hold it in position until LED stops blinking and turns solid red. At this point part of data gathering is complete.

**Don't remove battery from SLK-06 !**

7. Turn ignition switch **OFF** and remove key from it.
8. Perform again steps from 4 to 7 again. After this data gathering is complete.

When steps 1 to 8 are complete you can verify if data collection was performed successfully in Tango main software by using **Autodetect**:



SLK-06 is programmed.

State after data obtaining procedure is completed.


Note that, during Autodetect Tango will turn **OFF** the SLK-06 LED, but this is not problem, collected data remains.

### Calculation (Calculate Data)

1. Connect Tango and start Tango.exe
2. Select region Asia, then Toyota->Utility->SLK06 Sniffer
3. Insert SLK-06 in Tango coil

4. Press **Run Online Calculation** (this step requires Internet connection)


You will receive a message that our servers have received your request and will start calculating the data.

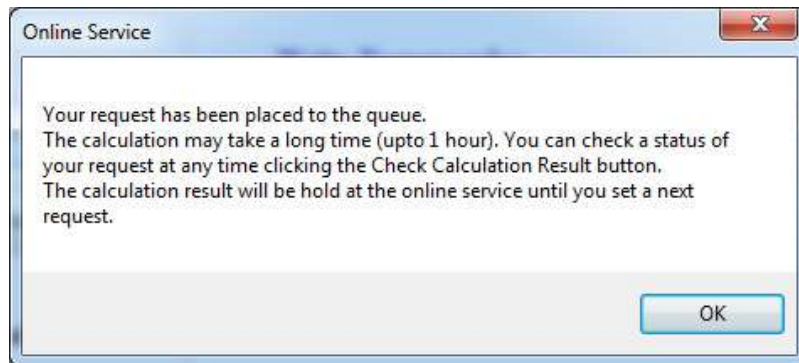

The process can take from **6 minutes up to several hours** (depends on several factors and servers ' load).

Once servers have received the data SLK-06 is no longer needed, you can remove its battery. Tango **doesn't** need to remain opened, you can close the software, disconnect Tango, or continue using it for some other work. If Tango remains opened and there is internet connection it will check once per minute for status of the calculation request.

5. You can check the status of your request by pressing **Check Calculation Status**

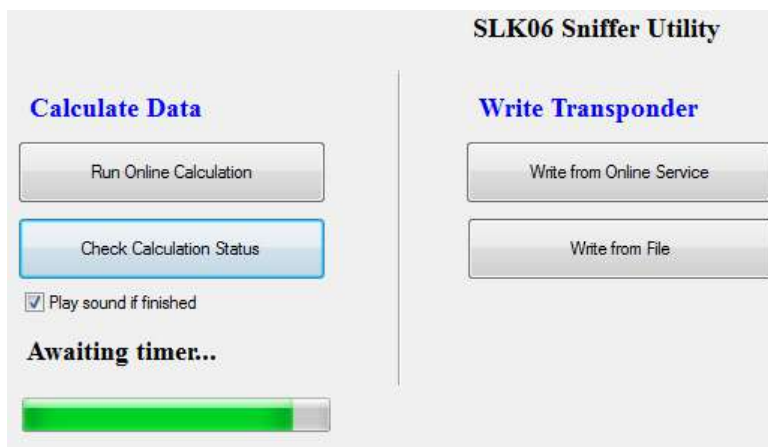


6. When calculation is complete you will be prompted to save a file.



This step is optional and just allows proceeding with [Master Key Creation](#) at later point, or in case you want to run another calculation right away. Our servers store the data of the **last** queued calculation indefinitely.

Previous calculation is erased when a **new** calculation request is submitted.

If you place a **new** request, while a **previous** is still being calculated, you will receive a message informing you that this action will cancel the current calculation, with option to continue or cancel.

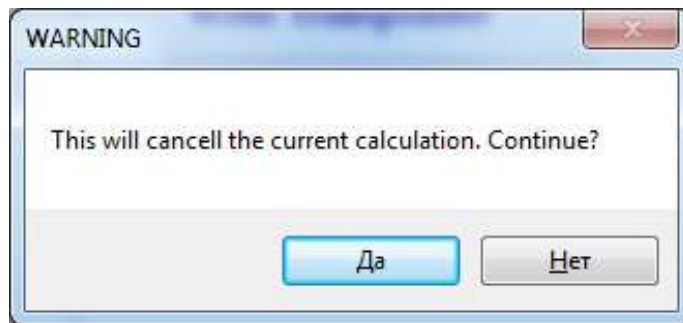

## Master Key Creation (Write Transponder)

1. Once Calculation process is complete, place a blank LKP-04 in Tango coil
2. Press **Write from Online Service**



- 2.1 If during [Calculation](#) phase you choose to save the file, it can be used via button **Write from File**
3. The LKP-04 transponder created becomes a master key for the vehicle you have obtained data from and can be further used to add more keys diagnostically by using any Toyota compatible diagnostic system (Techstream, etc..).

Operations with LKP-04 require [Toyota Image Generator H active](#).

## III. FAQ and Remarks

**Q:** Sniffer (SLK-06) doesn't blink?

**A:** Not inserted or low battery / Not placed correctly or next to ignition switch / Low or not connected vehicle battery or some other hardware issue with the vehicle. The sniffer itself can be tested in Tango. Place battery, start Tango and press Autodetect.

**Q:** During [Obtaining data](#) LED on SLK-06 blinks, but then it doesn't turn solid?

**A:** Data obtaining failure. At present moment roughly 50% of all vehicles equipped with H immobilizer ever produced can be done using our system. Unfortunately they can't be categorized by vehicle model/year/region, or even part number.

Supported models can conditionally be referred to as "First Generation H Immobilizer", regardless this also doesn't allow classification by year/model/part number/region. The bulk of vehicles equipped with 1st Gen are 2013-2014. Statistic on later vehicles is not exact as Toyota production information is not publicly disclosed.


MCU used in 1st Gen H is marked **11910**. H systems with MCUs marked **12xxx** is not supported.

**Q:** Error: Calculation error. Please make a new sniffing and try calculate again




**A:** Blank or no SLK-06 placed in Tango / [Obtaining data](#) steps were not performed.

**Q:** Error: Detected zero captured frame. Expected at least two frames.

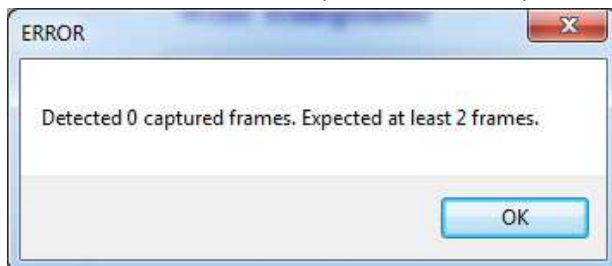

**A:** During [Obtaining data](#) steps 1 to 8 were not performed.

**Q:** Error: Detected one captured frame. Expected at least two frames.

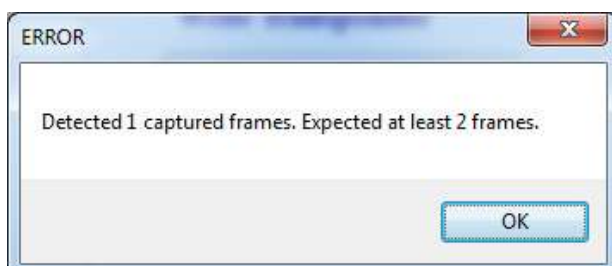

**A:** During [Obtaining data](#) step 8 was not performed.

**Q:** I have vehicle with H immo system, key Page1 20.

**A:** At present moment P1 20 are not support, only the main types P1 39,59,3A,5A.

